

## SAE **J3016™** LEVELS OF DRIVING AUTOMATION™

**Learn more here:** sae.org/standards/content/i3016 202104

Copyright © 2021 SAE International. The summary table may be freely copied and distributed AS-IS provided that SAE International is acknowledged as the source of the content.



SAE **LEVEL 1™** 

SAE LEVEL 2™

SAE **LEVEL 3™** 

SAE LEVEL 4™

You are not driving when these automated driving

features are engaged – even if you are seated in

"the driver's seat"

These are automated driving features

SAE LEVEL 5™

What does the human in the driver's seat have to do?

**You are driving** whenever these driver support features are engaged – even if your feet are off the pedals and you are not steering

You must constantly supervise these support features: you must steer, brake or accelerate as needed to maintain safety

When the feature requests.

you must drive

These automated driving features will not require you to take over driving

Copyright © 2021 SAE International.

## These are driver support features

These features are limited to providing What do these warnings and momentary assistance

These features provide steering **OR** brake/ acceleration support to the driver

These features provide steering **AND** brake/ acceleration support to the driver

These features can drive the vehicle under limited conditions and will not operate unless all required conditions are met

This feature can drive the vehicle under all conditions

features do?

 automatic emergency braking

- blind spot warning
- lane departure warning
- lane centering OR
- adaptive cruise control
- lane centering AND
- adaptive cruise control at the same time
- traffic jam chauffeur
- pedals/ steering wheel may or may not be installed

local driverless

taxi

same as level 4. but feature can drive everywhere in all conditions

Example **Features**