


TPDES STORMWATER PERMITS ORGANIZATION

EPA

TCEQ

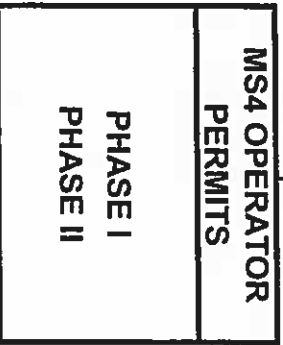

CONSTRUCTION PERMITS OPERATOR REQUIREMENTS

SMALL SITES (1-5 Acres)	LARGE SITES (≥ 5 Acres)
PREPARE SWPPP	PREPARE SWPPP
PREPARE CONSTRUCTION SITE NOTICE (CS _{SM})	PREPARE NOTICE OF INTENT (NOI)
SUBMIT COPY OF CS _{SM} TO MS4 OPERATOR(S)	PREPARE CONSTRUCTION SITE NOTICE (CS _{Lg})
POST CS _{SM} ON SITE	SUBMIT NOI TO TCEQ WITH FEE
IMPLEMENT SWPPP	SUBMIT COPY OF NOI TO MS4 OPERATOR(S)
COMPLETE MAINTENANCE INSPECTIONS	POST CS _{Lg} ON SITE
STABILIZE DISTURBED GROUND AREAS	IMPLEMENT SWPPP
REMOVE TEMP. STRUCTURAL BMPs	COMPLETE MAINTENANCE INSPECTIONS
REMOVE CS _{SM} FROM SITE	STABILIZE DISTURBED GROUND AREAS
COMPLETE BOTTOM TWO LINES OF CS _{SM}	REMOVE TEMP. STRUCTURAL BMPs
SUBMIT COPY OF COMPLETED CS _{SM} TO MS4 OPERATOR(S)	PREPARE NOTICE OF TERMINATION (NOT)
	SUBMIT NOT TO TCEQ
	SUBMIT COPY OF NOT TO MS4 OPERATOR(S)